



MN-766 • (021402) • ERN 8190

INSTALLATION GUIDE

For maximum effectiveness and safety, please read these instructions completely before proceeding with installation.

Ω

Failure to read these instructions can result in an incorrect installation.

TABLE OF CONTENTS

Q

Introduction	2
Installation Diagram	3
Installing the Air Suspension.Preparing the VehicleStock Shock Removal.Modifications for Air Suspension.Installing the Air Suspension.Damping Adjustment.Aligning the Vehicle.Adjusting Extended or Drop Height Using Lower Mount.	4 6 7 9
Before Operating	12
Product Use, Maintenance and Servicing. 1 Suggested Driving Air Pressure and Maximum Air Pressure 1 Maintenance Guidelines 1 Troubleshooting Guide 1 Frequently Asked Questions 1 Tuning the Air Pressure 1 Checking for Leaks 1 Fixing Leaks 1	13 13 13 13 14 14
Limited Warranty and Return Policy1	16
Replacement Information1	17
Contact Information1	17

0

Introduction

The purpose of this publication is to assist with the installation, maintenance and troubleshooting of this Audi Lifestyle kit.

It is important to read and understand the entire installation guide before beginning installation or performing any maintenance, service or repair. The information includes a hardware list, tool list, step-by-step installation information, maintenance tips, safety information and a troubleshooting guide.

Air Lift Company reserves the right to make changes and improvements to its products and publications at any time. For the latest version of this manual, contact Air Lift Company at (800) 248-0892 or visit our website at www.airliftcompany.com.

NOTATION EXPLANATION

Hazard notations appear in various locations in this publication. Information which is highlighted by one of these notations must be observed to help minimize risk of personal injury or possible improper installation which may render the vehicle unsafe. Notes are used to help emphasize areas of procedural importance and provide helpful suggestions. The following definitions explain the use of these notations as they appear throughout this guide.

DANGER INDICATES IMMEDIATE HAZARDS WHICH WILL RESULT IN SEVERE PERSONAL INJURY OR DEATH.

WARNING INDICATES HAZARDS OR UNSAFE PRACTICES WHICH COULD RESULT IN SEVERE PERSONAL INJURY OR DEATH.

CAUTION INDICATES HAZARDS OR UNSAFE PRACTICES WHICH COULD RESULT IN DAMAGE TO THE MACHINE OR MINOR PERSONAL INJURY.

NOTE

Indicates a procedure, practice or hint which is important to highlight.

IMPORTANT SAFETY NOTICES

The installation of this kit does not alter the Gross Vehicle Weight Rating (GVWR) or payload of the vehicle. Check your vehicle's owner's manual and do not exceed the maximum load listed for your vehicle.

Gross Vehicle Weight Rating: The maximum allowable weight of the fully loaded vehicle (including passengers and cargo). This number — along with other weight limits, as well as tire, rim size and inflation pressure data — is shown on the vehicle's Safety Compliance Certification Label.


Payload: The combined, maximum allowable weight of cargo and passengers that the vehicle is designed to carry. Payload is GVWR minus the Base Curb Weight.

WARNING DO NOT INFLATE AIR SPRINGS WHILE OFF OF THE VEHICLE. DAMAGE TO ASSEMBLY MAY RESULT AND VOID WARRANTY.

A CAUTION

DO NOT WELD TO, OR MODIFY LIFESTYLE STRUTS/SHOCKS IN ANY WAY. DAMAGE TO UNIT MAY OCCUR AND WILL VOID WARRANTY.

Installation Diagram

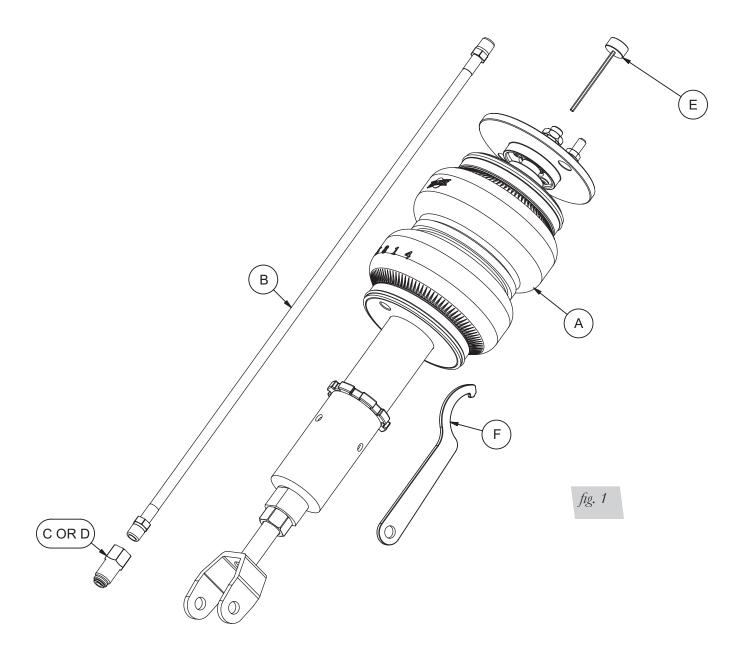

HARDWARE LIST

Item	Part #	DescriptionQty
Α	35202	ASM, Front Shock, Audi B52
В	20997	Leader Hose, 1/4" ID2
С	21810	Union, 1/4" FNPT-1/4" PTC "DOT"2
D	21987	Union, 1/4" FNPT X 3/8" Fitting "DOT"2
Е	26932-009	Shock Adjuster2
F		Wrench, Collar1

TOOLS LIST

Description	Qty
Jack	
Jack stands or hoist	2
1/2" Drive ratchet	1
17mm Socket	1
12mm Wrench	1
14mm Wrench	1
19mm Wrench & socket	1
Torque wrench	1



Missing or damaged parts? Call Air Lift customer service at (800) 248-0892 for a replacement part.

Installing the Air Suspension

PREPARING THE VEHICLE

- 1. Support vehicle with jack stands or a hoist at approved lifting points.
- 2. Remove the front wheels

STOCK SHOCK REMOVAL

NOTE

If equipped with headlight alignment system, disconnect range control linkage first.

- 1. Support the hub assembly to prevent over extension of suspension components
- 2. Remove lower shock bolt from track control link (bolt 1 in Fig. 2)
- 3. Disconnect the stabilizer bar (bolt 2 or 4 in Fig. 2)
- 4. Unbolt the track control link from the chassis (bolt 3 in Fig. 2)

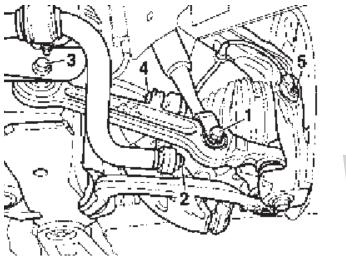


fig. 2

- 5. Remove the rubber weather-stripping and plenum chamber cover.
- 6. Unfasten the coolant reservoir and move away from plenum cover to reveal the upper bracket bolt (Figs. 3 and 4). Remove the round plastic cap located under the plenum cover to reveal the second bolt to be removed. The third is nested beside the ECU and is difficult to see but accessible without needing to remove the ECU. Unbolt the three bolts holding the stock upper bracket to the chassis (Fig. 5). Bolts on the other side are located within view once the plenum cover is removed.



fig. 3



7. Lower the upper bracket and remove both upper nuts from the bracket. Remove the shock assembly from the vehicle (Fig. 6).

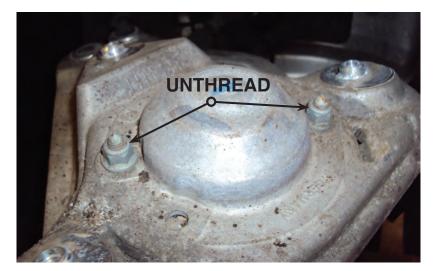


fig. 6

8. If the upper control arm bolt heads face toward the outside of the bracket remove the bolts and flip them so the head of the bolt will face the air spring (Fig. 7). This is done to gain air spring clearance and prevent wear of the air spring.

A CAUTION

FAILURE TO DO THIS MAY RESULT IN A PREMATURE FAILURE OF THE AIR SPRING AND WILL NOT BE COVERED UNDER WARRANTY. TIGHTEN THE BOLTS DOWN JUST ENOUGH THAT THE BUSHING CAN STILL ROTATE AROUND THE BOLT.



fig. 7

MODIFICATIONS FOR AIR SUSPENSION

1. Center punch and drill a 3/8" hole though the center of the suspension shock dome. This hole will be used as an access port for damping adjustments (Figs. 8 and 9).

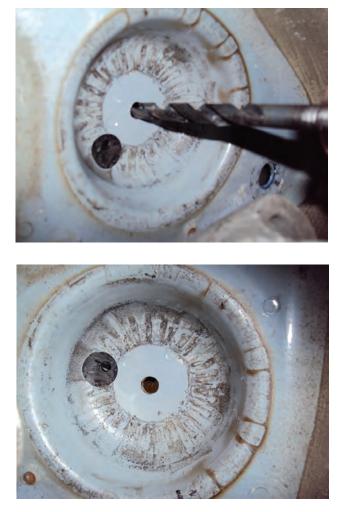


fig. 8


fig. 9

INSTALLING THE AIR SUSPENSION

1. Begin by installing the leader line into the air spring. Wrap the threads of the leader hose with Teflon tape or thread sealant. Tighten the appropriate fitting to the airline 1 3/4 turns beyond hand tight. Tighten the leader line into the air spring 1 ³/₄ turns beyond hand tight (Fig. 10).



- 2. Insert the new assembly and attach the upper bracket in place with the three bolts previously removed (Fig. 5). Make sure the shims are correctly seated to the chassis and not hung up on the upper bracket bosses.
- 3. Loosely install the clevis bolt into the lower control arm (Fig. 2). Also, loosely reinstall the track link to chassis bolt (Fig. 2). Loosely reattach the sway bar (Fig. 2). **Do not tighten these at this time.**
- 4. Reattach the upper control arm ball joints to the steering knuckle. Make sure the joints are fully seated as the bolt is slid through.
- 5. At this time, it is best practice to compress the suspension fully using a jack. With the suspension compressed, review the best routing for the leader hose that is clear of all suspension components and axle. Routing should also allow for the suspension to extend without kinking the line or rubbing on other components. Also check other clearances to all components. Depending on the desired drop height of the system, wires in the inner fender are best to be disconnected and rerouted inside the engine bay (Figs. 11 and 12).

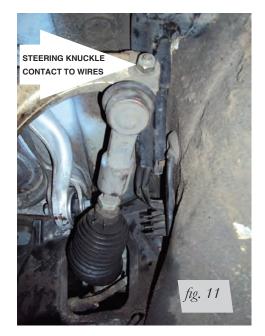



- With the suspension fully compressed, take a measurement from the fender to some reference point – typically the center of the axle. Record this measurement as Max Compression.
- 7. Cycle the suspension to Max Extension and record the measurement from the same reference points.
- 8. Add ME and MC then divide by 2. Set the suspension to this point. This position will give 50% stroke in either direction and is a starting point for ride height (Fig. 19).
- 9. With the suspension at this position, loosen and then re-torque the forward control arm to sub-frame bolt to manufacturer's specifications (Table 1).

Formula for Calculating Ride Height
(ME+MC)÷2=MID STROKE

Torque Specifications		
Location	Nm	ft. Ibs.
Shock upper bracket to or upper bracket	20Nm	15 ft./lbs.
Upper bracket to chassis	75	55
Upper control arms to bracket	50Nm + 90°	37 ft./lbs. + 90°
Track control link to shock clevis	90	66
Track control link to subframe	80	59
Guide link to subframe	90Nm + 90°	66 ft./lbs. + 90°
End link to track control link	100Nm	74 ft./lbs.
End link to sway bar	50Nm + 90°	37 ft./lbs. + 90°
Wheels	120	89

Table 1

DAMPING ADJUSTMENT

The shocks in this kit have 30 settings or "clicks" of adjustable compression and rebound damping characteristics. Damping is changed through the shock rod using the supplied adjuster or a 3mm Allen wrench (Figs. 20 and 21). Turn the adjuster clockwise and the damping settings are hardened. Turn the adjuster counterclockwise and the damping is softened. Each front shock is preset to "-6 clicks". This means that the shock is adjusted 6 clicks away from full stiff. Counting down from full stiff is the preferred method of keeping track/setting of damping. This setting was developed on a 2000 Audi S4 and may need to be adjusted to the different vehicles and driving characteristics.



ALIGNING THE VEHICLE


- 1. Using the control system, set the vehicle height to the new custom ride height.
- 2. If the custom ride height is lower than stock, we recommend loosening all pivot points (bolts, nuts) on any control arm, strut arm or radius rod that contains bushings (Fig. 7). Once they have been loosened, re-torque to stock specifications (Table 1).

NOTE

It may be necessary to cycle the suspension to loosen the bushing up from its mount. This will help re-orient the bushing at its new position based on the custom ride height.


ADJUSTING EXTENDED OR DROP HEIGHT USING LOWER MOUNT

Thread the fork mount into the adapter as shown in the diagram, with a measurement no less than 1.70 inches (or 43mm) (Fig. 22). Any measurement less than 1.70 inches may cause damage to the damper, resulting in undesirable performance and premature wear. Failure to maintain this condition will void warranty.

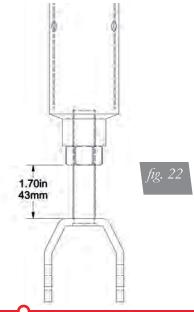

Your struts have been pre-set at the factory to provide maximum drop height while maintaining adequate tire clearance to the air spring. If you wish to gain more extended height (lift), which is the same as reducing drop height, or want to lower the chassis further and there is still adjustment available at the lower mount, please use the following procedure:

- 1. Support the vehicle with jack stands or a hoist at approved lifting points.
- 2. Remove the wheel.
- 3. Using the supplied spanner wrench, loosen the lower locking collar (Fig. 23).

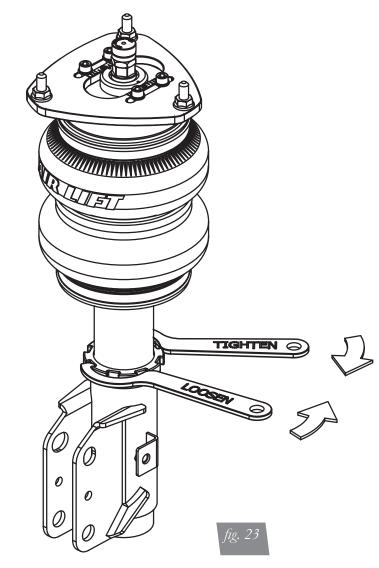

- 4. Deflate the air spring to 0 PSI on the corner you are adjusting.
- 5. Disconnect lower mount from suspension.
- 6. Spin the lower mount to the desired location.

NOTE

Not all models will have further drop height available.


- 7. Re-install lower mount to suspension and torque fasteners.
- 8. Tighten the lower locking collar to the lower mount using significant force.

A CAUTION

WHEN ADJUSTING HEIGHT UPWARDS, MAKE SURE THAT THE STRUT BODY ENGAGES ALL THE THREADS OF THE LOWER MOUNT (FIG. 24). WHEN ADJUSTING DOWNWARDS, MAKE SURE THERE IS ADEQUATE AIR SPRING CLEARANCE TO THE TIRE/WHEEL ASSEMBLY. CLEARANCE MUST BE CHECKED WITH SYSTEM FULLY DEFLATED AS WELL AS FULLY INFLATED TO ENSURE THAT NO RUBBING OCCURS. FAILURE TO MAINTAIN ADEQUATE CLEARANCE CAN RESULT IN AIR SPRING FAILURE AND WILL NOT BE COVERED UNDER WARRANTY.

CAUTION DO NOT ADJUST HEIGHT BY SPINNING AIR SPRING ON STRUT! DOING SO MAY CAUSE AN AIR LEAK AND COMPROMISE THE ASSEMBLY.

O

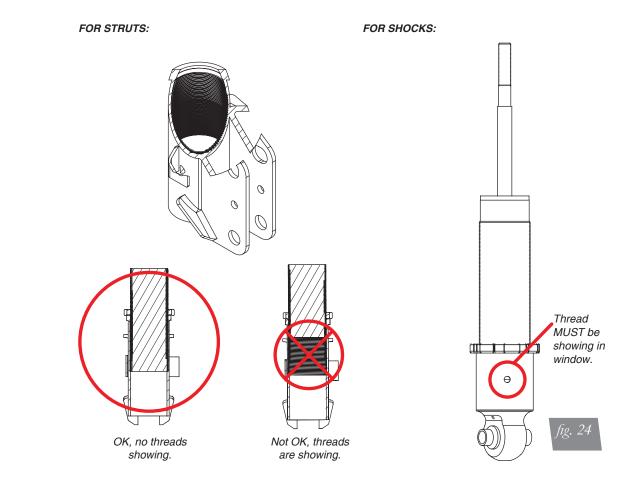

Before Operating

A CAUTION

MAKE SURE THE FRONT WHEELS ARE STRAIGHT WHEN DEFLATING AND REINFLATING AIR BAGS.

- 1. Inflate and deflate the system (do not exceed 125 PSI) to check for clearance or binding issues. With the air springs deflated, check clearances on everything so as not to pinch brake lines, vent tubes, etc. Clear lines if necessary.
- 2. Inflate the air springs to 75-90 PSI and check all connections for leaks.
- 3. An Air Lift air management system such as 3H/3P is highly recommended for this product.
- 4. Please familiarize yourself further with this product by reading the Product Use, Maintenance and Servicing section.

INSTALLATION CHECKLIST

- □ Clearance test Inflate the air springs to 75-90 PSI and make sure there is at least a half-inch of clearance from anything that might rub against each sleeve. Be sure to check the tire, brake drum, frame, shock absorbers and brake cables.
- □ Leak test before road test Inflate the air springs to 75-90 PSI and check all connections for leaks. All leaks must be eliminated before the vehicle is road tested.
- □ Heat test Be sure there is sufficient clearance from heat sources, at least 6" for air springs and air lines. If a heat shield was included in the kit, install it. If there is no heat shield, but one is required, call Air Lift customer service at (800) 248-0892.
- □ Fastener test Recheck all bolts for proper torque.
- Road test The vehicle should be road-tested after the preceding tests. Inflate the springs to recommended driving pressures. Drive the vehicle 10 miles and recheck for clearance, loose fasteners and air leaks.
- Operating instructions If professionally installed, the installer should review the operating instructions with the owner. Be sure to provide the owner with all of the paperwork that came with the kit.

Technician's Signature

Date_

POST-INSTALLATION CHECKLIST

- Overnight leak down test Recheck air pressure after the vehicle has been used for 24 hours. If the pressure has dropped more than 5 PSI, then there is a leak that must be fixed. Either fix the leak yourself or return to the installer for service.
- □ Air pressure requirements Regardless of load, the air pressure should always be adjusted to maintain adequate ride height at all times while driving.
- Thirty day or 500 mile test Recheck the air spring system after 30 days or 500 miles, whichever comes first. If any part shows signs of rubbing or abrasion, the source should be identified and moved, if possible. If it is not possible to relocate the cause of the abrasion, the air spring may need to be remounted. If professionally installed, the installer should be consulted. Check all fasteners for tightness.

Product Use, Maintenance and Servicing

Suggested Driving Air Pressure

Maximum Air Pressure

airlir

70 PSI

125 PSI

FAILURE TO MAINTAIN ADEQUATE MINIMUM PRESSURE (OR PRESSURE PROPORTIONAL TO LOAD) WILL RESULT IN BOTTOMING OUT, OVER-EXTENSION OR RUBBING AGAINST ANOTHER COMPONENT AND WILL VOID THE WARRANTY.

MAINTENANCE GUIDELINES

NOTE

By following these steps, vehicle owners will obtain the longest life and best results from their air spring.

- 1. Check the air pressure before driving.
- Never inflate beyond 125 PSI.
- 3. If you develop an air leak in the system, use a soapy water solution to check all air line connections, before deflating and removing the spring.
- 4. When increasing load, always adjust the air pressure to maintain normal ride height. Increase or decrease pressure from the system as necessary to attain normal ride height for optimal ride and handling. Remember that loads carried behind the axle (including tongue loads) require more leveling force (pressure) than those carried directly over the axle.

CAUTION

FOR YOUR SAFETY AND TO PREVENT DAMAGE TO YOUR VEHICLE, DO NOT EXCEED MAXIMUM GROSS VEHICLE WEIGHT RATING (GVWR), AS INDICATED BY THE VEHICLE MANUFACTURER. ALTHOUGH YOUR AIR SPRINGS ARE RATED AT A MAXIMUM INFLATION PRESSURE OF 125 PSI, THE AIR PRESSURE ACTUALLY NEEDED IS DEPENDENT ON YOUR LOAD.

- 5. Always add air to the springs in small quantities, checking the pressure frequently. Sleeves require less air volume than a tire and inflate quickly.
- 6. Should it become necessary to raise the vehicle by the frame, make sure the control system is turned off before lifting.

TROUBLESHOOTING GUIDE

- 1. Leak test the air line connections, the threaded connection into the air spring, and all fittings in the control system.
- 2. Inspect the air lines to be sure none are pinched. Tie straps may be too tight. Loosen or replace the strap and replace leaking components.
- 3. Inspect the air line for holes and cracks. Replace as needed.
- 4. Look for a kink or fold in the air line. Reroute as needed.

If the preceding steps do not solve the problem, it is possibly caused by a failed air spring — either a factory defect or an operating problem. Please call Air Lift at (800) 248-0892 for assistance.

FREQUENTLY ASKED QUESTIONS

Q. Will installing air springs increase the weight ratings of a vehicle?

O

No. Adding air springs will not change the weight ratings (GAWR, GCWR and/or GVWR) of a vehicle. Exceeding the GVWR is dangerous and voids the Air Lift warranty.

Q. How long should air springs last?

If the air springs are properly installed and maintained they can last indefinitely.

Q. Will raising the vehicle on a hoist for service work damage the air springs?

No. The vehicle can be lifted on a hoist for short-term service work such as tire rotation or oil changes. However, if the vehicle will be on the hoist for a prolonged period of time, support the axle with jack stands in order to take the tension off of the air springs.

TUNING THE AIR PRESSURE

Pressure determination comes down to three things - level vehicle, ride comfort, and stability.

1. Level vehicle

If the vehicle's headlights are shining into the trees or the vehicle is leaning to one side, then it is not level. Raise the air pressure to correct either of these problems and level the vehicle.

2. Ride comfort

If the vehicle has a rough or harsh ride it may be due to either too much pressure or not enough. Try different pressures to determine the best ride comfort. See Air Lift suggested driving air pressure.

3. Stability

Stability translates into safety and should be the priority, meaning the driver may need to sacrifice a perfectly level and comfortable ride. Stability issues include roll control, bounce, dive during braking and sponginess. Tuning out these problems usually requires additional air pressure, strut damping, or both.

CHECKING FOR LEAKS

- 1. Inflate the air spring to 80 PSI.
- 2. Spray all connections and the inflation valves with a solution of 1/5 liquid dish soap and 4/5 water. Spot leaks easily by looking for bubbles in the soapy water.
- 3. After the test, deflate the springs to the minimum pressure required to restore the system to normal ride height.
- 4. Check the air pressure again after 24 hours. A 2 4 PSI loss after initial installation is normal. Retest for leaks if the loss is more than 5 lbs.

FIXING LEAKS

- 1. If there is a problem with a swivel fitting:
 - a. Check the air line connection by deflating the spring and removing the line by pulling the collar against the fitting and pulling firmly on the air line. Trim 1" off the end of the air line. Be sure the cut is clean and square (see Fig. 25). Reinsert the air line into the push-to-connect fitting.
 - b. Check the threaded connection by tightening the swivel fitting another 1/2 turn. If it still leaks, deflate the air spring, remove the fitting, and re-coat the threads with thread sealant. Reinstall by hand tightening as much as possible and then use a wrench for an additional two turns.
- 2. If the preceding steps have not resolved the problem, call Air Lift customer service at (800) 248-0892.



Ο

Ο

Notes

Limited Warranty and Return Policy

WHAT THIS WARRANTY COVERS

Air Lift Company, for all Air Lift Performance products, except its Air Lift Performance 3H[™] and 3P[™] systems, warrants to the original purchaser for a period of one year from the date of original purchase that the Air Lift Performance damper kits will be free from defects in workmanship and materials for the normal expected life of the part when used on cars and trucks as specified by Air Lift Company and under normal operating conditions, subject to the requirements and exclusions set forth below.

Air Lift Company provides a Limited Lifetime Warranty to the original purchaser of its Air Lift Performance 3H[™] and 3P[™] Control/Air Management Systems, that the Air Lift Performance products will be free from defects in workmanship and materials for the normal expected life of the part when used on cars and trucks as specified by Air Lift Company and under normal operating conditions, subject to the requirements and exclusions set forth below.

WHAT THIS WARRANTY DOES NOT COVER

The warranty does not apply to products that have been improperly applied, improperly installed, or which have not been maintained in accordance with installation instructions furnished with all products. This warranty does not apply and is void if damage or failure is caused by: accident, abuse, misuse (including but not limited to racing or off-road activities or commercial use), abnormal use, faulty installation, liquid contact, fire, earthquake or other external cause; operating the product outside Air Lift Company's instructions, specifications or guidelines; or service, alteration, maintenance or repairs performed by anyone other than Air Lift Company to the product from its purchased condition. This warranty also does not apply to: Universal Air (Fabricator Kits), consumable parts, such as batteries; cosmetic damage, including but not limited to scratches or dents; defects caused by normal wear and tear or otherwise due to the normal aging of the product, or if any serial or identification number has been removed or defaced from the product. Air Lift Company reserves the right to change the design of any product without assuming any obligation to modify any product previously manufactured.

LIMITATION OF LIABILITY

To the extent permitted by law, this warranty and the remedies set forth herein are exclusive and in lieu of all other warranties, remedies and conditions, whether oral, written, statutory, express or implied. AIR LIFT COMPANY DISCLAIMS ALL STATUTORY AND IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PUR-POSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS TO THE EXTENT PERMITTED BY LAW. To the extent such warranties cannot be disclaimed, such implied warranties shall apply only for the warranty period specified above. Please note that some states do not allow limitation on how long an implied warranty (or condition) lasts. So the above limitation may not apply to you.

Except as provided in this warranty and to the extent permitted by law, Air Lift Company shall not be liable for any direct, special, incidental or consequential damages resulting from any breach of warranty or condition, or arising in connection with the sale, use or repair of air lift products, or under any other legal theory, including but not limited to loss of use, loss of revenue, loss of actual or anticipated profits, loss of the use of money, loss of business, loss of opportunity, loss of goodwill, and loss of reputation. Air Lift Company's maximum liability shall not in any case exceed the purchase price paid by you for the Air Lift product. Please note that some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

HOW TO GET SERVICE

If a defect in workmanship or materials causes your Air Lift Performance product to become inoperable within the warranty period, before returning any defective product, call Air Lift Company at (800) 248-0892 in the U.S. and Canada (elsewhere, (517) 322-2144) to obtain a Returned Materials Authorization (RMA) number. The consumer shall be responsible for removing (labor charges) the defective product from the vehicle and returning it, shipping costs prepaid, to Air Lift Company for verification. Returns to Air Lift Company must be postage prepaid and sent to: Air Lift Company • 2727 Snow Road • Lansing, MI • 48917. You must prove to the satisfaction of Air Lift Company the date of original purchase of your Air Lift Performance product. You must also enclose the RMA number and a return address. A minimum \$10 shipping and handling charge will apply to all warranty claims. You must also pack the product to minimize the risk of it being damaged in transit. If we receive a product in damaged condition as the result of shipping, we will notify you and you must seek a claim with the shipper.

WHAT AIR LIFT COMPANY WILL DO

If you submit a valid claim to Air Lift Company during the warranty period, Air Lift Company will, at its option, repair your Air Lift Performance product or furnish you with a new or rebuilt product. Air Lift Company will not reimburse you for repairs or replacement parts provided by other parties. Your repaired or replacement Air Lift Performance product will be returned to you (subject to payment of the required warranty claim shipping and handling charge) and it will be covered under the warranty for the balance of the warranty period, if any. When a product or part is replaced, any replacement item becomes your property and the replaced item becomes property of Air Lift Company. You are responsible for installation/reinstallation (labor charges) of the product.

HOW THE LAW RELATES TO THIS WARRANTY

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. By this warranty, Air Lift Company does not limit or exclude your rights except as allowed by law. To fully understand your rights, you should consult the laws of your state.

Replacement Part Information

If replacement parts are needed, contact the local dealer or call Air Lift customer service at **(800) 248-0892**. Most parts are immediately available and can be shipped the same day.

Contact Air Lift Company customer service at (800) 248-0892 first if:

- Parts are missing from the kit.
- Need technical assistance on installation or operation.
- Broken or defective parts in the kit.
- Wrong parts in the kit.
- Have a warranty claim or question.

Contact the retailer where the kit was purchased:

- If it is necessary to return or exchange the kit for any reason.
- If there is a problem with shipping if shipped from the retailer.
- If there is a problem with the price.

Contact Information

Mailing address	P.O. Box 80167 Lansing, MI 48908-0167
Shipping address for returns	2727 Snow Road Lansing, MI 48917
Phone	Toll free: (800) 248-0892 International: (517) 322-2144
Email	service@airliftcompany.com
Web address	www.airliftcompany.com

Need Help?

Contact our customer service department by calling (800) 248-0892. For calls from outside the USA or Canada, our local number is (517) 322-2144.



Thank you for purchasing Air Lift Performance products!

Ο

Air Lift Performance • 2727 Snow Road • Lansing, MI 48917 or PO Box 80167 • Lansing, MI 48908-0167 Toll Free (800) 248-0892 • Local (517) 322-2144 • Fax (517) 322-0240 • www.airliftperformance.com

Printed in the USA



Kit 75655 Audi A4/S4 Quattro B5 Platform

Rear Application

INSTALLATION GUIDE

SEE PAGE 14 FOR IMPORTANT INFORMATION ABOUT SLEEVE-STYLE DAMPERS BEFORE INSTALLATION.

For maximum effectiveness and safety, please read these instructions completely before proceeding with installation.

Ο

Failure to read these instructions can result in an incorrect installation.

TABLE OF CONTENTS

Q

0

Introduction	2
Installation Diagram	3
Installing the Air Suspension	4 5 6 8
Tips for Installing the Air Lines 1 Cutting Air Lines 1 Push-to-Connect (PTC) Fittings 1 Check for Leaks 1 Fixing Leaks 1	10 10 10
Before Operating. 1 Setting Ride Height 1 Formula for Calculating Ride Height 1 Torque Specifications 1 Suggested Air Pressure. 1 Checking for Binding. 1 Damping Adjustment. 1 Aligning the Vehicle. 1 Adjusting Extended or Drop Height Using Lower Mount 1 After Initial Installation 1 Installation Checklist 1 Post-installation Checklist. 1	11 11 11 12 12 12 13 14 15
Product Use, Maintenance and Servicing	16
Limited Warranty and Returns Policy 1 Replacement Information 1	17
Contact Information 1	

Introduction

Air Lift Performance thanks you for purchasing the most complete, fully engineered highperformance air suspension made for the Audi A4/S4 Quattro. Read these installation instructions to correctly and safely set up the vehicle for a #lifeonair.

Air Lift assumes that the installer has the mechanical knowledge and ability to work on vehicle suspension systems and has basic tools necessary to complete the project. Special tools needed to complete the installation are noted on the Installation Diagram page.

Air Lift reserves the right to make changes and improvements to its products and publications at any time. For the latest version of this manual, contact Air Lift Performance at **(800) 248-0892** or visit **www.airliftperformance.com**.

An Air Lift Performance air management system is highly recommended for this product. Learn more at **air-lift.co/productlines**.

NOTATION EXPLANATION

Hazard notations appear in various locations in this publication. Information which is highlighted by one of these notations must be observed to help minimize risk of personal injury or possible improper installation which may render the vehicle unsafe. Notes are used to help emphasize areas of procedural importance and provide helpful suggestions. The following definitions explain the use of these notations as they appear throughout this guide.

DANGER INDICATES IMMEDIATE HAZARDS WHICH WILL RESULT IN SEVERE PERSONAL INJURY OR DEATH.

WARNING INDICATES HAZARDS OR UNSAFE PRACTICES WHICH COULD RESULT IN SEVERE PERSONAL INJURY OR DEATH.

CAUTION INDICATES HAZARDS OR UNSAFE PRACTICES WHICH COULD RESULT IN DAMAGE TO THE MACHINE OR MINOR PERSONAL INJURY.

Indicates a procedure, practice or hint which is important to highlight.

Important Safety Notices




NOTE

DO NOT INFLATE AIR SPRINGS WHILE OFF OF THE VEHICLE. DAMAGE TO ASSEMBLY MAY RESULT AND VOID WARRANTY.



DO NOT WELD TO OR MODIFY PERFORMANCE STRUTS/SHOCKS IN ANY WAY. DAMAGE TO UNIT MAY OCCUR AND WILL VOID WARRANTY.

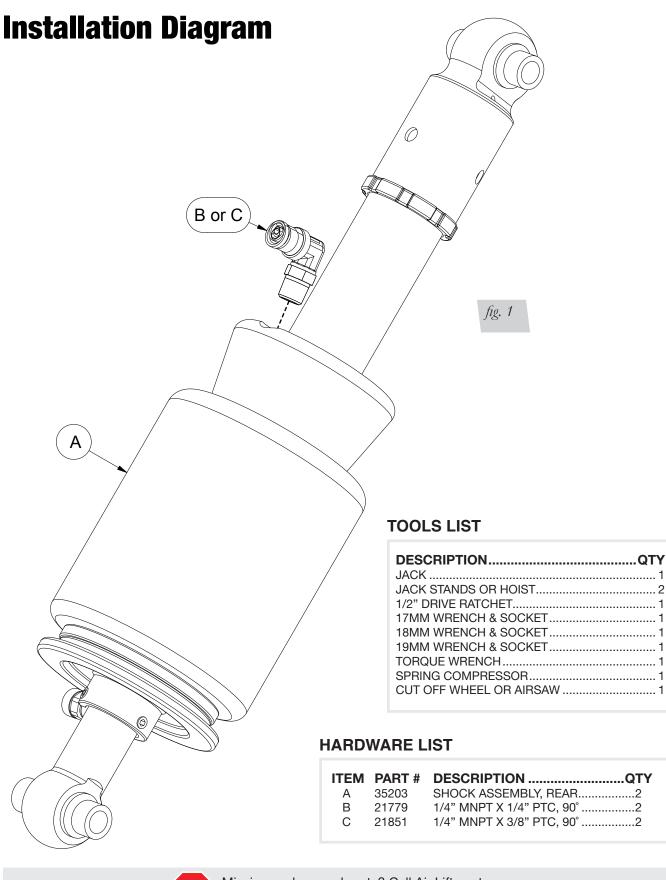

Missing or damaged parts? Call Air Lift customer STOP! service at (800) 248-0892 for a replacement part.

Installing the Air Suspension

NOTE

Due to the inverted nature of the air spring, it is recommended to periodically clean (once every two months) the rolling lobe end cap of debris that may have accumulated while driving (Fig. 2). Best practice is to use a water hose or compressed air to remove debris while the suspension is at maximum extension (all up). Snow belt and off-road drivers should complete this task at shorter intervals.



A CAUTION

THIS SUSPENSION HAS THE ABILITY TO ADJUST THE OVERALL LENGTH OF THE SHOCK/DAMPER ASSEMBLY. THE LENGTH HAS BEEN PRESET BY AIR LIFT TO PROVIDE THE MAXIMUM AMOUNT OF DROP WITHOUT CUTTING THE REAR SUBFRAME. FURTHER DECREASING THE OVERALL DAMPER LENGTH WILL REDUCE THE STROKE OF THE SHOCK, ALLOW THE AXLE TO CONTACT THE SUBFRAME AND FINALLY, MOVE THE AIR SPRING TO AN UNAPPROVED POSITION... NONE OF WHICH IS ADVISED.

NOTE

Vehicles with automatic headlight aligning systems need to have the linkages disconnected from control arms before other suspension components are removed to prevent over-extension of the module.

PREPARING THE VEHICLE

- 1. Support the vehicle with jack stands or a hoist at approved lifting points.
- 2. Remove the rear wheels.

fig. 2

STOCK SHOCK REMOVAL

- 1. Support the hub assembly to prevent over extension of suspension components
- 2. Disconnect the sway bar link from wheel bearing housing (Fig. 3).

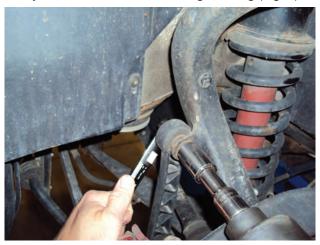


fig. 3

3. Unbolt the lower shock eye (Fig. 4).

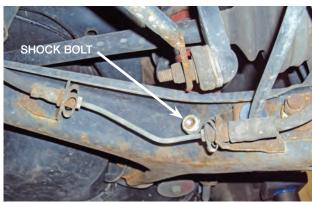


fig. 4

4. Disconnect the knuckle from the upper control arm and remove the four bolts attaching the upper shock mount to the chassis (Fig. 5).



fig. 5

5. The shock assembly can now be removed from the vehicle (Fig. 6).



fig. 6

6. Using a coil spring compressor, compress the coil spring until the shock is loose. Unbolt the upper shock eye bolt and remove the upper bracket (Fig. 7).



fig. 7

PREPARING FOR THE AIR SUSPENSION

- 1. Install the desired fitting into the air spring air-port: apply thread sealant around fitting threads and thread 1-3/4 turns beyond hand tight.
- 2. Measure down from the coil spring land approximately 1/2" to 5/8" and cut flush around the spring land (Figs. 8, 9 & 10).



Ο

fig. 8

fig. 9

fig. 10

3. Locate the appropriate shock assembly (left or right) and insert into the OEM upper bracket and determine the location of the air fitting. Mark a clearance section around the fitting (Fig. 11), remove the shock and trim away (Fig. 12). Amount of trimming is dependent on which fitting is used. Scallop the area where the fitting will be positioned. Clean the area and paint over the worked surfaces.



INSTALLING THE AIR SUSPENSION

1. Install the new shock assembly into the upper bracket and attach the upper bracket/shock assembly to the chassis using the previously removed 4 bolts (Fig. 13).



fig. 13

2. Reattach the upper control arm to the wheel bearing hub and chassis (Fig. 14).





3. Lift the hub assembly up and reinsert the lower shock eye bolt (Fig. 15).



fig. 15

4. Reattach the sway bar end link to the wheel bearing hub (Fig. 16).

О



fig. 16

NOTE

At this point, cycle the suspension through its complete travel. Check clearances around the air spring. Check the clearance around the fitting. Also, check the clearance of the axle to the subframe. All rotating bushings should be re-clocked at the desired ride height, torque to manufacturers specifications (see Table 1 on page 11).

Tips for Installing the Air Lines

CUTTING AIR LINES


When cutting air lines, use a sharp knife or a hose cutter and make clean, square cuts (Fig. 17). Do not use scissors or wire cutters because these tools will deform the air line, causing it to leak around fittings. Do not cut the lines at an angle.

The minimum bend radius for 1/4" air line is 1". The minimum bend radius for 3/8" air line is 1.5". Do not bend the air line less than the minimum bend radius or side load the fitting connections. Air lines are to be installed straight into fittings.

Inspect the air line for scratches that run lengthwise prior to installation. Contact Air Lift customer service at **(800) 248-0892** if the air line is damaged.




To watch a video demonstrating proper air line cutting, go to air-lift.co/cuttingairline

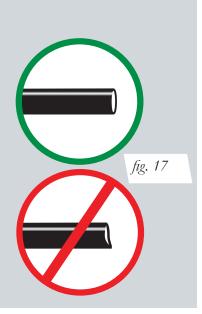

PUSH-TO-CONNECT (PTC) FITTINGS

Air lines should be pushed into the push-to-connect fittings firmly, with a slight side-to-side rotational twist. Check the connection by pulling on each line to verify a robust connection.

To release the air line from the connection (Fig. 18), first release all air from the system. Push in on the air line (step 1), push the collar in (step 2), and with the collar depressed, pull the air line out of the fitting (step 3).

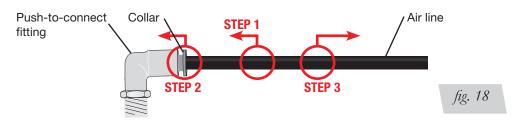

CHECKING FOR LEAKS

- 1. Inflate the air spring to 75-90 PSI.
- 2. Spray all connections with a solution of 1/5 liquid dish soap and 4/5 water. Spot leaks easily by looking for bubbles in the soapy water.
- 3. After the test, deflate the springs to the minimum pressure required to restore the system to normal ride height.
- 4. Check the air pressure again after 24 hours. A 2-4 PSI loss after initial installation is normal. Retest for leaks if the loss is more than 5 PSI.

FIXING LEAKS

- 1. If there is a problem with the push-to-connect fitting, remove the air line as described above. Trim 1" off the end of the air line. Be sure the cut is clean and square (see Fig. 17).
- 2. Reinsert the air line into the push-to-connect fitting as described above.

NOTE

Before Operating

SETTING THE RIDE HEIGHT

- 1. With the suspension fully compressed, take a measurement from the fender to a chosen reference point typically the center of the axle. Record this measurement as max compression (MC).
- 2. Cycle the suspension to max extension (ME) and record the measurement from the fender to the same reference point.
- Add ME and MC, then divide the total by 2. Set the suspension to this point. This position will give 50% stroke in either direction and is a starting point for ride height (Fig. 19).



4. With the suspension at this position, loosen, then re-torque all suspension bushing pivot joint fasteners to the manufacturer's specifications (Table 1):

TORQUE SPECIFICATIONS		
LOCATION	Nm	Lbft.
WHEEL BOLTS	120	89
UPPER SHOCK EYE	70 + 90°	52 + 90°
LOWER SHOCK EYE	70 + 90°	52 + 90°
BRACKET TO CHASSIS	55	41
UPPER CONTROL ARM TO KNUCKLE	50 + 90°	37 + 90°
UPPER CONTROL ARM TO UPPER BRACKET	50 + 90°	37 + 90°
LOWER CONTROL ARM TO SUBFRAME (2 BOLTS)	70 + 90°	52 + 90°
TRACK ROD ECCENTRIC BOLT FOR TOE ADJUSTMENT	90	66
SAY BAR END LINK	40 + 90°	30 + 90°
WHEELS	120	89

Table 1

Suggested Driving Air Pressure	Maximum Air Pressure	
90 PSI	125 PSI	
FAILURE TO MAINTAIN ADEQUATE MINIMUM PRESSURE (OR PRESSURE PROPOR- TIONAL TO LOAD) MAY RESULT IN EXCESSIVE BOTTOMING OUT AND WILL VOID THE WARRANTY .		

Table 2

CHECK FOR BINDING

- 1. Inflate and deflate the system (do not exceed 125 PSI) to check for clearance or binding issues. With the air springs deflated, check clearances on everything so as not to pinch brake lines, vent tubes, etc. Clear lines if necessary.
- 2. Inflate the air springs to 75-90 PSI and check all connections for leaks.

MAKE SURE THE FRONT WHEELS ARE STRAIGHT WHEN DEFLATING AND REIN-FLATING AIR BAGS.

DAMPING ADJUSTMENT

Suspension damping is a matter of compromise. Setting it too stiff will make the ride feel jarring. In addition, if the suspension is too stiff, the tires will lose contact with the road, reducing control and power delivery. On the other hand, if the suspension is too soft, the car can experience brake dive and excessive bouncing. The sweet spot lies somewhere in the middle. Air Lift dampers have a range of adjustment, which allows the driver to tune the ride and handling to his or her preferences.

Air Lift recommends damper and air pressure settings for every vehicle kit, but it is impossible to consider every situation. For example, even though Air Lift kits replace the dampers and springs, vehicles with sport-tuned suspensions might have stiffer bushings, larger anti-roll bars, bigger wheels, wider tires, etc. These settings may need to be adjusted to different vehicles and driving characteristics.

The shocks in this kit have 30 settings or "clicks" of adjustable compression and rebound damping characteristics. Damping is changed through the adjuster above the lower eye mount (Fig. 20). Turn the adjuster clockwise and the damping settings are hardened. Turn the adjuster counterclockwise and the damping is softened. Each rear shock is preset to "-10 clicks". This means that the shock is adjusted 10 clicks away from full stiff. Counting down from full stiff is the preferred method of keeping track/ setting of damping. This setting was developed on a 2000 S4 and may need to be adjusted to the different vehicles and driving characteristics.



ALIGNING THE VEHICLE

- 1. Set the vehicle to the height at which it will most often be driven.
- 2. If the ride height is lower than stock, Air Lift Performance recommends loosening all pivot points (bolts, nuts) on any control arm, strut arm or radius rod that contains bushings. Once they have been loosened, re-torque to stock specifications (Table 1).

It may be necessary to cycle the suspension to loosen the bushing from its mount. This will help re-orient the bushing at its new position based on the chosen ride height.

3. Get a shop alignment of the vehicle at the new chosen ride height.

NOTE

ADJUSTING EXTENDED OR DROP The dampers in this kit HEIGHT USING LOWER MOUNT may look different, but These dampers have been pre-set at the factory they all allow to provide maximum drop height while maintaining adjustment adequate tire clearance to the air spring. If you wish of the locking to gain more extended height (lift), which is the same RULIEI collar with as reducing drop height, or want to lower the chassis the included further and there is still adjustment available at the spanner lower mount, please use the following procedure: wrench. 1. Support the vehicle with jack stands or a hoist at approved lifting points. 2. Remove the wheel. 3. Using the supplied spanner wrench, loosen the Ŵ locking collar (Fig. 21). 4. Deflate the air spring to 0 PSI on the corner you are Ø fig. 21 adjusting. 0 5. Disconnect lower mount from suspension. Spin the lower mount to the desired location. NOTE Not all vehicles will have further drop height available.


- 7. Re-install lower mount to suspension and torque fasteners.
- 8. Tighten the lower locking collar to the lower mount using significant force.

<u>A</u> CAUTION

WHEN ADJUSTING HEIGHT UPWARD, MAKE SURE THAT THE DAMPER BODY EN-GAGES ALL THE THREADS OF THE LOWER MOUNT (FIG. 22). WHEN ADJUSTING DOWNWARD, MAKE SURE THERE IS ADEQUATE AIR SPRING CLEARANCE TO THE TIRE/WHEEL ASSEMBLY. CLEARANCE MUST BE CHECKED WITH SYSTEM FULLY DEFLATED AS WELL AS FULLY INFLATED TO ENSURE THAT NO RUBBING OCCURS. FAILURE TO MAINTAIN ADEQUATE CLEARANCE CAN RESULT IN AIR SPRING FAIL-URE AND WILL NOT BE COVERED UNDER WARRANTY.

<u><u>A</u> CAUTION</u>

DO NOT ADJUST HEIGHT BY SPINNING AIR SPRING ON DAMPER! DOING SO MAY CAUSE AN AIR LEAK AND COMPROMISE THE ASSEMBLY.

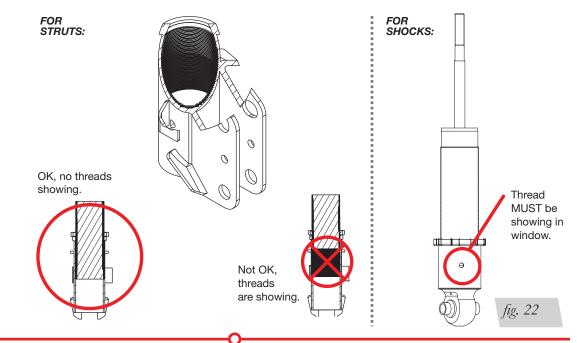

AFTER INITIAL INSTALLATION OF SLEEVE-STYLE DAMPERS

<u>A</u> CAUTION

DO NOT CYCLE THE SUSPENSION WITH THE AIR LINE CONNECTED TO THE LEADER HOSE WITHOUT FIRST ADDING AIR SPRING PRESSURE. DOING SO MAY CAUSE THE AIR SPRING TO IMPROPERLY INFLATE (FIG. 23). IT IS SAFE TO CYCLE THE SUSPENSION TO CHECK FOR CLEARANCES ETC. WITH THE LEADER HOSE OPEN TO ATMOSPHERE (DISCONNECTED FROM AIR LINE).

BEFORE SETTING VEHICLE ON THE GROUND FOR THE FIRST TIME, IT IS VERY IMPORTANT TO INFLATE THE AIR SPRINGS TO AT LEAST 50 PSI. THIS WILL PREVENT ANY POSSIBILITY OF THE AIR SPRING KICKING OUT AND CAUSING A LEAK (FIG. 24).



fig. 23

fig. 24

fig. 25

Caused by cycling with air line attached without pressure. Remove air-line from spring to release vacuum and re-attach. Inflate to more than 50 PSI before lowering car to ground. **Do NOT drive!** Shows what spring looks like after lowering car to ground with less than 50 PSI and raising it with air pressure. **Do NOT drive!** Shows what spring looks like when installed correctly.

INSTALLATION CHECKLIST

- □ **Clearance** Inflate the air springs to 75-90 PSI and make sure there is at least 1/2" clearance from anything that might rub against the air spring. This should be checked with the air spring fully inflated and fully deflated.
- □ Leak Inflate the air springs to 75-90 PSI and check all connections for leaks. All leaks must be eliminated before the vehicle is road tested.
- □ **Heat** Be sure there is sufficient clearance from heat sources, at least 6" for air springs and air lines. If a heat shield was included in the kit, install it. If there is no heat shield, but one is required, call Air Lift customer service at **(800) 248-0892**.
- □ **Fastener** Recheck all bolts for proper torque.
- □ **Road** Inflate the springs to recommended driving pressures (Table 2). Drive the vehicle 10 miles and recheck for clearance, loose fasteners and air leaks.
- □ **Operating instructions** − If professionally installed, the installer should review the operating instructions with the owner. Be sure to provide the owner with all paperwork that came with the kit.

POST-INSTALLATION CHECKLIST

- □ **Overnight leak down test** Recheck air pressure 24 hours after installation and driving of the vehicle. If the pressure has dropped more than 5 PSI, there is a leak that must be fixed.
- □ Air pressure requirements It is important to understand the air pressure requirements of the air spring system. Regardless of load, the air pressure should always be adjusted to maintain adequate ride height at all times while driving.
- □ Thirty-day or 500-mile test Recheck the air spring system after 30 days or 500 miles, whichever comes first. If any part shows signs of rubbing or abrasion, the source should be identified and moved, if possible. If it is not possible to relocate the cause of the abrasion, the air spring may need to be remounted. If professionally installed, the installer should be consulted. Check all fasteners for tightness.

WARNING

Product Use, Maintenance and Servicing

- 1. An Air Lift air management system is strongly recommended for this product, but it is possible to operate without one. The air lines can be routed to Schrader valves for use with a separate air compressor. Air lines and Schrader valves are not included with Air Lift Performance kits and would need to be purchased separately. To learn more about Air Lift air management systems visit **air-lift.co/productlines**.
- 2. Check the air pressure before driving.

BEFORE SERVICING THE VEHICLE, MAKE SURE TO TURN OFF "RISE ON START" AND "PRESET MAINTAIN." THIS WILL ELIMINATE ANY UNINTENDED SUSPENSION CYCLING IF YOU NEED TO TURN THE KEY ON IN THE VEHICLE FOR ANY REASON.

TUNING THE AIR PRESSURE

Pressure determination comes down to three things — level vehicle, ride comfort and stability.

1. Level vehicle

Depending on load, it is possible one side will need more pressure than the other to level the vehicle.

2. Ride comfort

If the vehicle has a harsh ride, it may be due to either too much pressure or not enough causing frequent bottoming out. Also, riding the vehicle at the top, or close to the top of the available stroke will cause an uncomfortable ride due to a lack of rebound travel. This situation should be avoided for driving any significant distance. Try different pressures to determine the best ride comfort. See the Air Lift suggested driving air pressure for this vehicle (Table 2, page 11).

3. Stability

Stability translates into safety and should be the priority, meaning the driver may need to sacrifice a perfectly level and comfortable ride. Stability issues include roll control, bounce, dive during braking and sponginess. Tuning out these problems usually requires additional air pressure, damping or both.

PROBLEM	CAUSE	SOLUTION	
Air spring won't maintain pressure.	Leak at fitting, air line not cut properly or damage to air line during installation.	Find location of leak by spraying listed components with soapy water solution and look for bubbles. Tighten air fitting, re-cut air line or replace damaged components.	
	Leak at lower O-ring on damper if air spring is over the damper.	Spray bottom of air spring with soapy water solution and look for bubbles. Contact Air Lift customer service at (800) 248-0892 to determine if component should be replaced.	
Knocking noise when hitting bumps.	Loose suspension component such as locking collar on damper.	Tighten lower locking collar with significant force, check and tighten suspension components to factory specs at desired ride height.	
	Driving vehicle too close to maximum extension.	Check current ride height and compare to maximum height. If there is less than 1" (25mm) difference, reduce air pressure to lower ride height.	
		Lengthen strut or shock to increase available up travel.	
Suspension bottoms out.	Air pressure is too low, causing air springs to bottom out.	Raise air pressure.	
The ride is too bouncy.	Air pressure is too high, causing air springs to be too stiff.	Lower air pressure and adjust damper length if necessary to achieve proper ride height.	
	Damping is inadequate.	Increase damping with adjusters.	
The ride is too soft or floaty.	Damping is inadequate.		
The ride is too harsh.	Excessive damping.	Reduce damping with adjusters.	

TROUBLESHOOTING GUIDE

Limited Warranty and Return Policy

Air Lift Company provides a 1-year limited warranty to the original purchaser of Air Lift Performance damper kits from the date of original purchase, that the products will be free from defects in workmanship and materials when used on vehicles as specified by Air Lift Company and under normal operating conditions, subject to the requirements and exclusions set forth in the full Limited Warranty and Return Policy that is available online at www.airliftperformance.com/warranty.

For additional warranty information contact Air Lift Company customer service.

Replacement Part Information

If replacement parts are needed, call Air Lift customer service. Most parts are immediately available and can be shipped the same day.

Contact Air Lift Company customer service at (800) 248-0892 first if:

- Parts are missing from the kit.
- Need technical assistance on installation or operation.
- Broken or defective parts in the kit.
- Wrong parts in the kit.
- Have a warranty claim or question.

Contact the retailer where the kit was purchased:

- If it is necessary to return or exchange the kit for any reason.
- If there is a problem with shipping if shipped from the retailer.
- If there is a problem with the price.

Contact Information

Mailing address	P.O. Box 80167 Lansing, MI 48908-0167
Shipping address for returns	2727 Snow Road Lansing, MI 48917
Phone	Toll free: (800) 248-0892 International: (517) 322-2144
Email	service@airliftcompany.com
Web address	www.airliftcompany.com

Air Lift Company reserves the right to make changes and improvements to its products and publications at any time. For the latest version of this manual, contact Air Lift Company at **(800) 248-0892** or visit **www.airliftperformance.com**.

Need Help?

Contact Air Lift Company customer service department by calling (800) 248-0892. For calls from outside the USA or Canada, dial (517) 322-2144.

CONNECT BY SEARCHING FOR **AIR LIFT PERFORMANCE** #LIFEONAIR



Thank you for purchasing Air Lift Performance products!

Ο

Air Lift Performance • 2727 Snow Road • Lansing, MI 48917 or P.O. Box 80167 • Lansing, MI 48908-0167 Toll Free (800) 248-0892 • Local (517) 322-2144 • Fax (517) 322-0240 • www.airliftperformance.com

Printed in the USA JJC-0417