



Application Part Number: SL00209 (Rear Kit)



Developed On: 2021 Toyota Supra RWD



Recommended Ride Pressure: 80 PSI
(Do not exceed 200 PSI)



Recommended Damping: 10 Clicks
(Clockwise clicks from full soft)



Recommended Thread Length: 120 mm
(Measurement between lockrings)



Developed On: 2015 BMW 335i Sedan RWD & 2012 BMW 318d Wagon AWD



Recommended Ride Pressure: 125 PSI
(Do not exceed 200 PSI)





Recommended Damping: 10 Clicks
(Clockwise clicks from full soft)



Recommended Thread Length: 137 mm
(Measurement between lockrings)

Installation Notes:

Inflate air spring and align upper mount before setting the car on the ground.
Please remove factory upper spring perch before bag install.

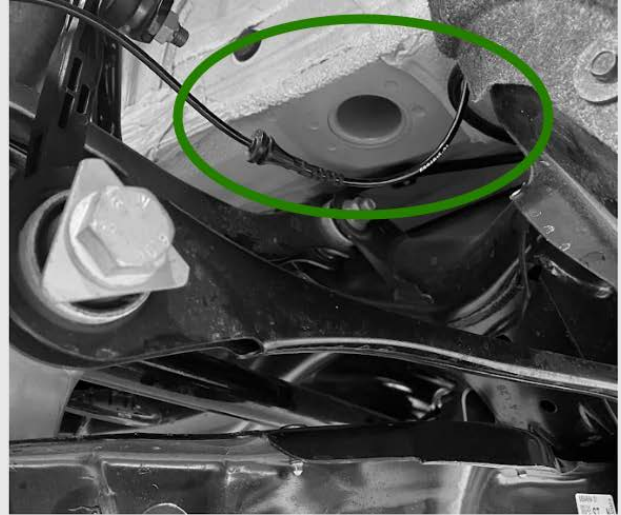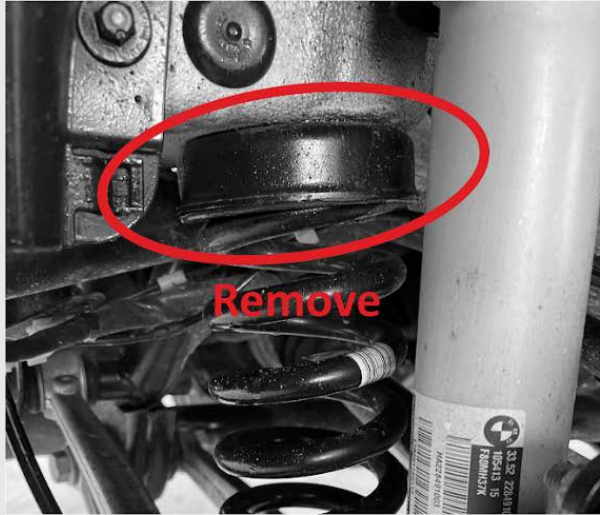

NOTE: The recommendations and notes in this document were derived from the research and road testing conducted by Bag Riders using the vehicle listed above. If you are installing part(s) on a different vehicle, please ensure that air spring clearances are checked throughout the entire suspension travel range, including fully collapsed (aired out). In regards to damping and pressure recommendations: these are what we preferred for ourselves. We encourage you to experiment and find your most ideal suspension feel on your personal vehicle. Use our recommendations as a starting point!